

POU Installation Rail with Brita Scale Filter & Carbon Block Filter (BFRAILKIT)


The following information is provided to facilitate connecting a hot POU water dispenser to mains water. If you are in any doubt, please consult a plumber or the building/facilities manager. The components in this kit have been selected to ensure that the installation complies with WRAS guidelines.

Component Overview

15mm brass compression equal T piece	CONT15	3/4" BSP to 1/4" John Guest pushfit reducer	REDU3414
15mm brass compression equal elbow piece	CONE15	1/4" John Guest tubing (3m)	TUBE1410
15mm copper tubing (10cm)	TUBECOP1510	1/4" BSP to 3/8" John Guest pushfit connector (x2)	ADAP1438
15mm double check valve & isolation tap	VCD	Brita filter head	BRITACHEAD3014
Pressure reducing valve (2.5-3bar)	PRV	Brita C150 resin scale filter	FILTC150
Water block & non-return valve	WBLOC		


Installation Instructions

1. Isolate water supply at stop cock or isolation valve.
2. Cut the copper pipe leaving enough room to install the T piece (or elbow piece if the mains pipe is in a vertical position).
3. The cut piece of copper can be used to connect the brass T (or elbow) piece to the double check valve.
4. It is recommended to use support clips for pipe work.
5. Install the BFRAILKIT components in the order shown in the diagram.
6. Check that the water block has been installed vertically with the flow direction pointing down.
7. Follow Brita's installation instructions for flushing the C150 scale filter when installing and replacing the filter.
8. Thoroughly check all pipe work before commissioning and leaving site.

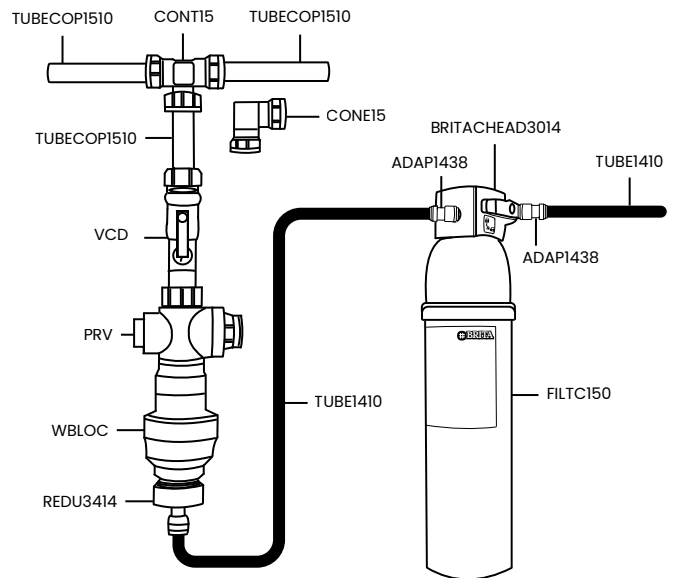

About the Water Block

The water block is designed to prevent large scale flooding by limiting the amount of water (dependant on the setting) that passes through in one flow. The water block should be installed in a vertical position with the flow direction pointing down. To set the flow meter on the water block, use the white key provided to move the arrow to number 1 on the inside of the rim. This will limit the flow to 4.5ltrs. If the arrow points to '2', the flow will be limited to 9ltrs and so on. If the water block shuts the water off, the pink button in the centre of the block will pop out. Simply depress the button to reset.

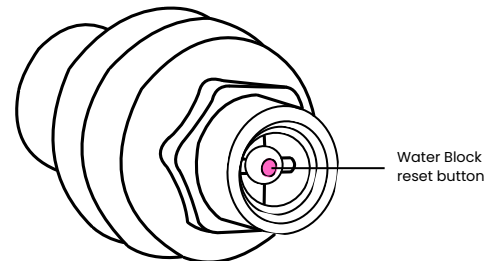

AA FIRST is a division of CIRCON LTD: Registered in England 5121722

UK HQ:

Cedar House
Grange Farm
Long Lane
Newbury, RG14 2TF

T: +44 (0) 1635 202489
E: enquiries@aafirst.co.uk
W: aafirst.co.uk

FRENCH HQ:

T: +33 (0) 674 437 445
E: derek@aafirst.eu
W: aafirst.fr
W: aafirst.de

T: +33 (0) 670 817 660
E: marie@aafirst.eu
W: aafirst.fr
W: aafirst.de

AA FIRST
Quality – Reliability – Integrity

