

POU Installation Rail with Brita Scale Filter & Carbon Block Filter (PFRAILKITCOSN)


The following information is provided to facilitate connecting a POU water cooler to mains water. If you are in any doubt, please consult a plumber or the building/facilities manager.

Component Overview

15mm brass compression equal T piece	CONT15	3/8" John Guest pushfit elbow piece	STEME3838
15mm brass compression equal elbow piece	CONE15	3/8" John Guest tubing (2m)	TUBE38
15mm copper tubing (10cm)	TUBECOP1510	3/8" John Guest pushfit T piece	CONT3838
15mm double check valve & isolation tap	VCD	3/8" John Guest pushfit stem adaptor (x2)	STEM38516
Pressure reducing valve (2.5-3bar)	PRV	Reusable filter housing (3/8" head)	FILTHOUN38
Water block & non-return valve	WBLOC	Carbon block filter candle	FILTCAR
3/4" BSP to 3/8" John Guest pushfit reducer	REDU3438		


Installation Instructions

1. Isolate water supply at stop cock or isolation valve.
2. Cut the copper pipe leaving enough room to install the T piece (or elbow piece if the mains pipe is in a vertical position).
3. The cut piece of copper can be used to connect the brass T (or elbow) piece to the double check valve.
4. It is recommended to use support clips for pipe work.
5. Install the PFRAILKITCOSN components in the order shown in the diagram.
6. Check that the water block has been installed vertically with the flow direction pointing down.
7. **Ensure the carbon filter has been flushed for 2 minutes before connecting to the cooler.**
8. Thoroughly check all pipe work before commissioning and leaving site.

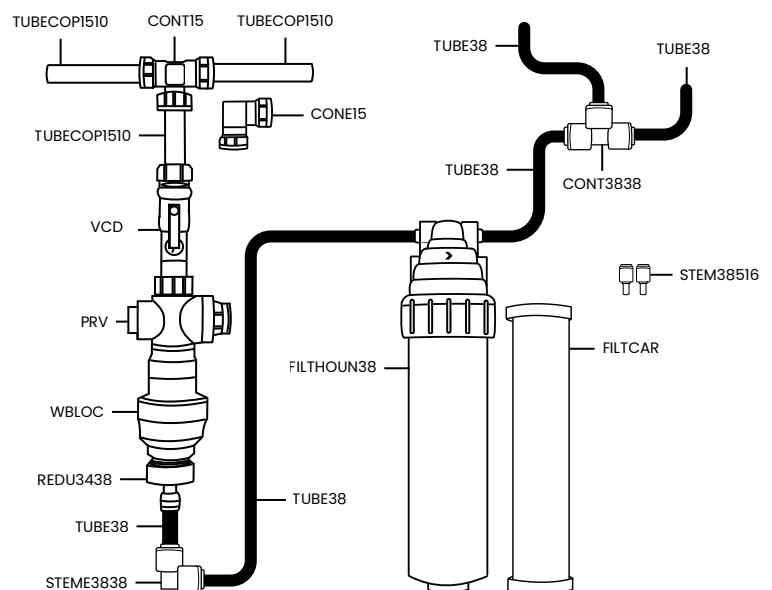

About the Water Block

The water block is designed to prevent large scale flooding by limiting the amount of water (dependant on the setting) that passes through in one flow. The water block should be installed in a vertical position with the flow direction pointing down. To set the flow meter on the water block, use the white key provided to move the arrow to number 1 on the inside of the rim. This will limit the flow to 4.5ltrs. If the arrow points to '2', the flow will be limited to 9ltrs and so on. If the water block shuts the water off, the pink button in the centre of the block will pop out. Simply depress the button to reset.

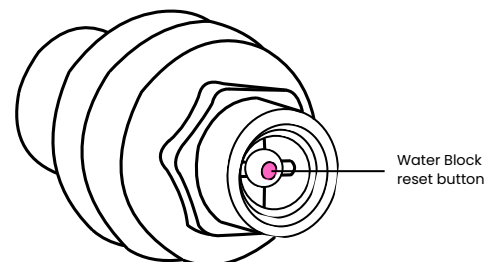

AA FIRST is a division of CIRCON LTD: Registered in England 5121722

UK HQ:

Cedar House
Grange Farm
Long Lane
Newbury, RG14 2TF

T: +44 (0) 1635 202489
E: enquiries@aafirst.co.uk
W: aafirst.co.uk

FRENCH HO:

T: +33 (0) 674 437 445
E: derek@aafirst.eu
W: aafirst.fr
W: aafirst.de

T: +33 (0) 670 817 660
E: marike@aafirst.eu
W: aafirst.fr
W: aafirst.de

