

POU Installation Rail with Brita Scale Filter & Carbon Block Filter (BPFRAILKIT)


The following information is provided to facilitate connecting a hot and cold POU water dispenser to mains water. If you are in any doubt, please consult a plumber or the building/facilities manager. The components in this kit have been selected to ensure that the installation complies with WRAS guidelines.

Component Overview

15mm brass compression equal T piece	CONT15	1/4" John Guest tubing (3m)	TUBE1410
15mm brass compression equal elbow piece	CONE15	1/4" John Guest pushfit T piece	CONT14
15mm copper tubing (10cm)	TUBECOP1510	Reusable filter housing (1/4" head)	FILTHOUN
15mm double check valve & isolation tap	VCD	Carbon block filter candle	FILTCAR
Pressure reducing valve (2.5-3bar)	PRV	1/4" BSP to 3/8" John Guest pushfit connector (x2)	ADAP1438
Water block & non-return valve	WBLOC	Brita filter head	BRITACHEAD
3/4" BSP to 1/4" John Guest pushfit reducer	REDU3414	Brita C150 resin scale filter	FILTC150

Installation Instructions

1. Isolate water supply at stop cock or isolation valve.
2. Cut the copper pipe leaving enough room to install the T piece (or elbow piece if the mains pipe is in a vertical position).
3. The cut piece of copper can be used to connect the brass T (or elbow) piece to the double check valve.
4. It is recommended to use support clips for pipe work.
5. Install the BPFRAILKIT components in the order shown in the diagram.
6. Check that the water block has been installed vertically with the flow direction pointing down.
7. Follow Brita's installation instructions for flushing the C150 scale filter when installing and replacing the filter.
8. Ensure the carbon filter has been flushed for 2 minutes before connecting to the cooler.
9. Thoroughly check all pipe work before commissioning and leaving site.

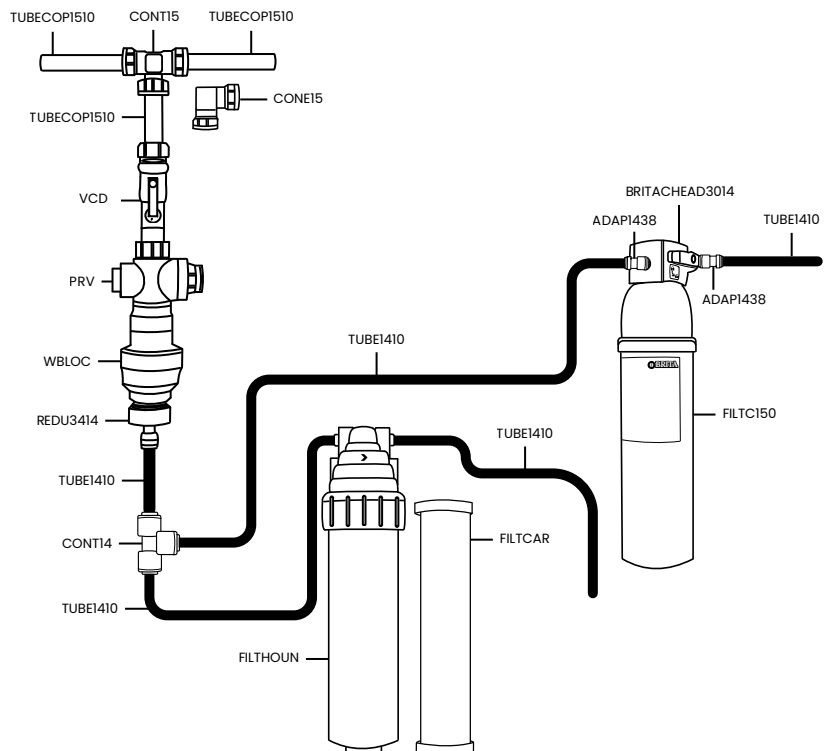

AA FIRST is a division of CIRCON LTD: Registered in England 5121722

UK HQ:

Cedar House
Grange Farm
Long Lane
Newbury, RG14 2TF

T: +44 (0) 1635 202489
E: enquiries@aafirst.co.uk
W: aafirst.co.uk

FRENCH HQ:

T: +33 (0) 674 437 445
E: derek@aafirst.eu
W: aafirst.fr
W: aafirst.de

T: +33 (0) 670 817 660
E: marike@aafirst.eu
W: aafirst.fr
W: aafirst.de

AA FIRST
Quality – Reliability – Integrity

